
# **Assembly Instructions**

### **5 Piece dining set**

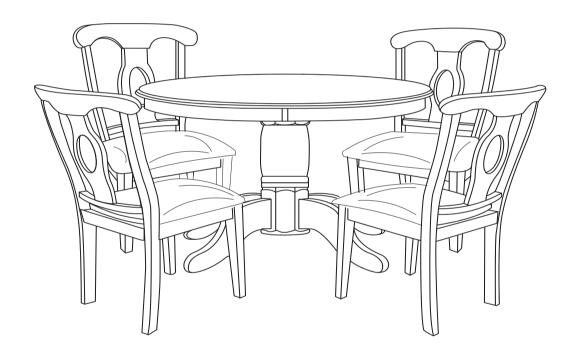

This instruction booklet contains safety information. Please read and keep for future reference.

#### **NOTES:**

- Ensure all parts and components are present before beginning assembly.
- Assemble on a soft, smooth surface to prevent damage to product finish.
- A Phillips head screw driver is not included.
- **DO NOT** use power tools.
- CAUTION: Adult assembly required.
- Assembly will require two people.
- Estimated assembly time: 45 minutes.

#### CARE AND CLEANING

Dust regularly with a soft, lint-free cloth to prevent soil build-up. A damp cloth may be used occasionally to clean surface. Dry immediately. Do not use any abrasives that may damage finish. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

#### MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

#### LIMITED WARRANTY

Your product is warranted against defects in workmanship or material for ONE YEAR from the date of purchase. This warranty shall be limited to repairing or replacing any part of the product which, in the opinion of the company, shall be proved defective in materials or workmanship under normal use and service during the one year warranty period. During the one year warranty period, repair or replacement pf parts shall be made at no charge. Date of purchase of the product must be established by production of your sales slip or other satisfactory evidence.

**WARNING:** Should this product become damaged, and/or components are broken or missing, DO NOT USE.

#### **HARDWARE LIST**

1	2
Ø5/16" x 12MM	Ø5/16" x 12MM
NUT 8 PCS	SPRING WASHER 60 PCS
3	
Ø5/16" x 19MM	Ø5/16" x 1-1/4"
FLAT WASHER 60 PCS	BOLT 4 PCS
5	6
Ø1/4" x 2-1/4"	
BOLT 16 PCS	ALLEN WRENCH 1 PC
7	8
	Ø1/4" x 3"
ALLEN KEY 1 PC	BOLT 16 PCS
9	10
	( <del>f</del> ) [)
Ø1/4" x 1-1/2"	8MM x 1-1/2"
BOLT 16 PCS	SCREW 12 PCS

### **PARTS LIST**


A	В
TABLE TOP 1 PC	TABLE BASE PANEL 1 PC
C	D
CENTER POST 1 PC	LEG 4 PCS
E	F
BACK FRAME 4 PCS	FRONT LEG 8 PCS
G	H
SEAT FRAME 4 PCS	SEAT BOARD 4 PCS

#### STEP 1

With the help of another person, place center post (C) upside down on a clean smooth surface.

Remove the plastic plugs from the legs (D) as shown below.


Attach legs (D) to the center post (C) with nuts (1), spring washers (2) and flat washers (3) using Allen wrench (6).

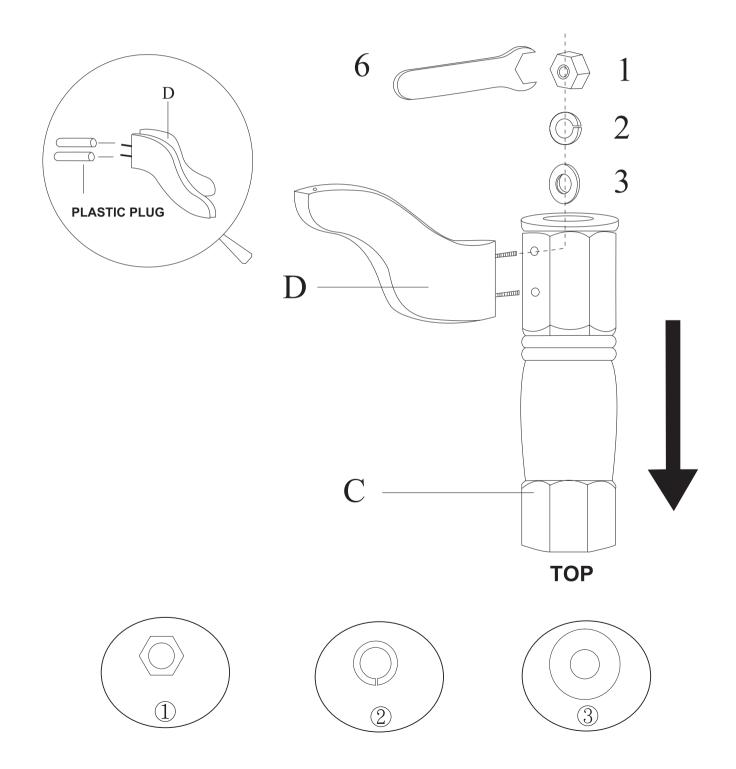

#### STEP 2

Turn the assembled table pedestal upside down.


Attach the table base panel (B) to the center post (C) with spring washers (2), flat washers (3) and bolts (4) using Allen key (7).

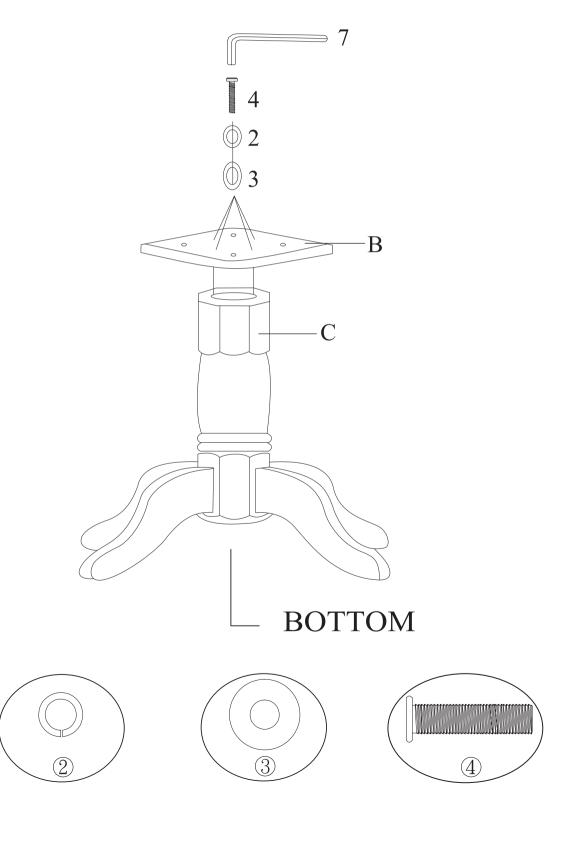

#### STEP 3

With the help of another person, place table top (A) upside down on a clean smooth surface.

Attach the table base panel (B) to the table top (A) with spring washers (2), flat washers (3) and bolts (9) using Allen key (7).

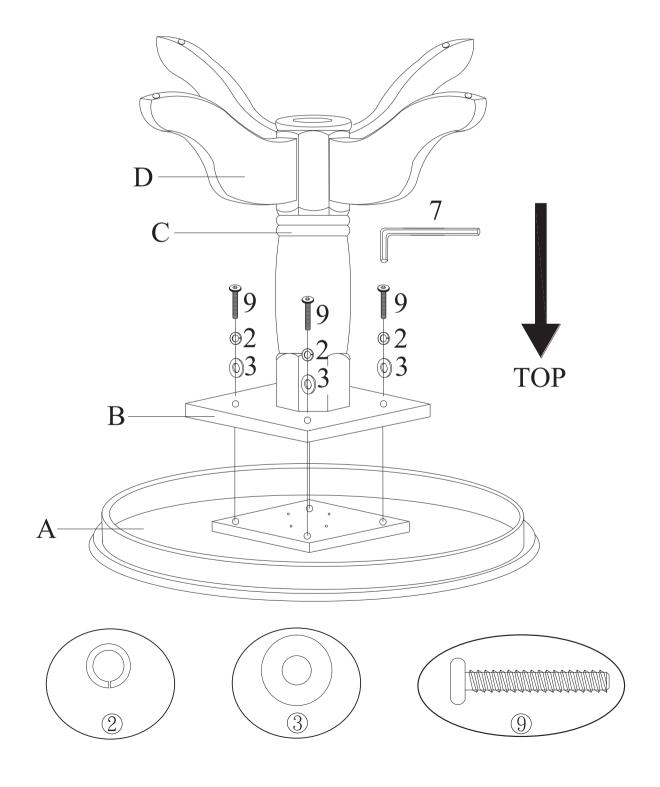


#### STEP 4

Turn the table upright.

Adjust the levelers underneath each leg to ensure that the table rests evenly on the floor.

You've finished assembling the dining table.

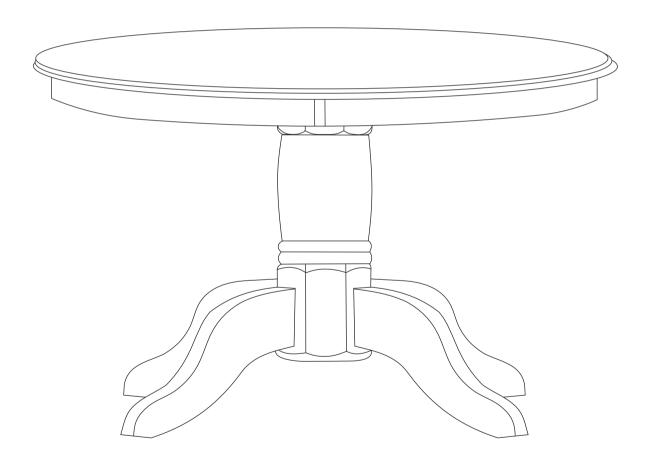



#### STEP 5


Attach the front legs (F) to the seat frame (G) with spring washers (2), flat washers (3) and bolts (5) through the corners of seat frame (G).


Use Allen key (7) to tighten the bolts.

NOTE: Do not fully tighten the bolts in this step.

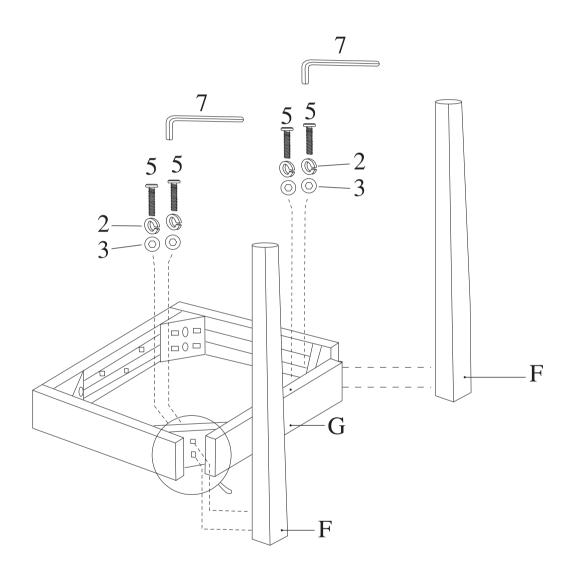

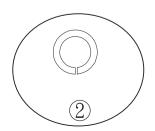

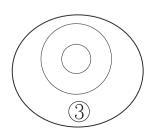

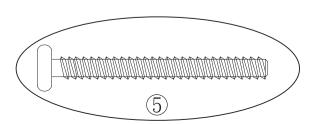


#### STEP 6

Attach seat frame (G) to the back frame (E) using bolts (8), spring washers (2) and flat washers (3) through the corners of seat frame (G).

Secure center of seat frame (G) to the back frame (E) with bolts (9), spring washers (2) and flat washers (3).

Use Allen key (7) to tighten the bolts (8 & 9). Turn the chair frame upright.

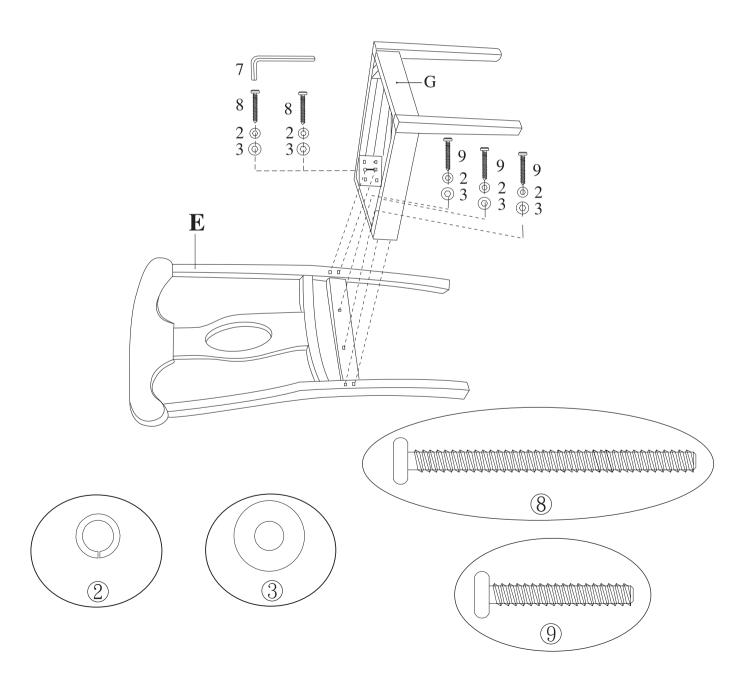


#### STEP 7


To facilitate the attachment of seat board (H) to the assembled chair frame, place seat board (H) on the table surface as shown.

Protect the smooth table surface and seat board (H) by laying a towel between the seat board (H) and the table.


Attach the seat board (H) to the chair frame with screws (10) using a Phillips head screw driver (not included).

Repeat steps 5-7 to assemble the other 3 chairs.

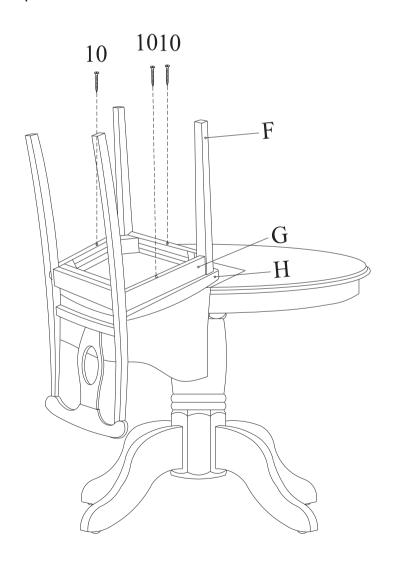

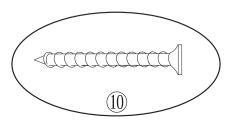

**CAUTION:** This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

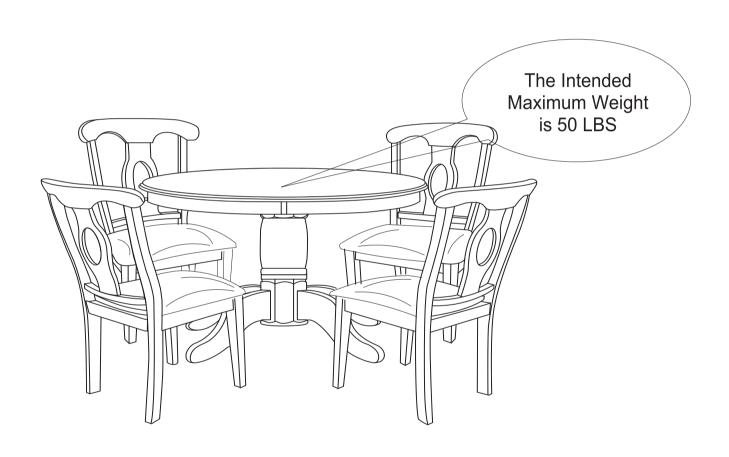

That's it! You've finished assembling your dining set.

### DO <u>NOT</u> RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.