
 
Assembly Instructions

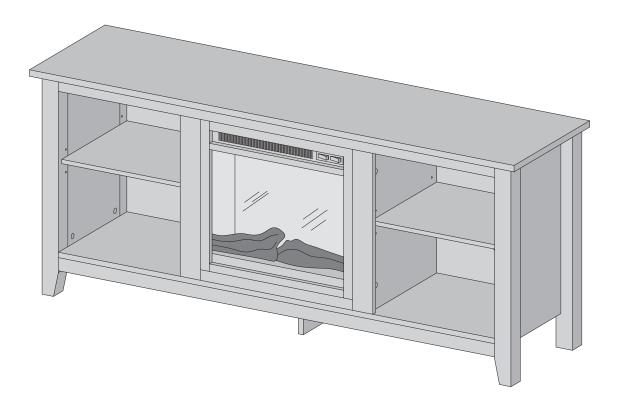

Please visit our website for the most current instructions, assembly tips, report damage, or request parts.

General Assembly Guidelines

 
- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




VI. A Phillips head screwdriver is required for the assembly of this product.



 
VII. Power tools should not be used to assemble this product.



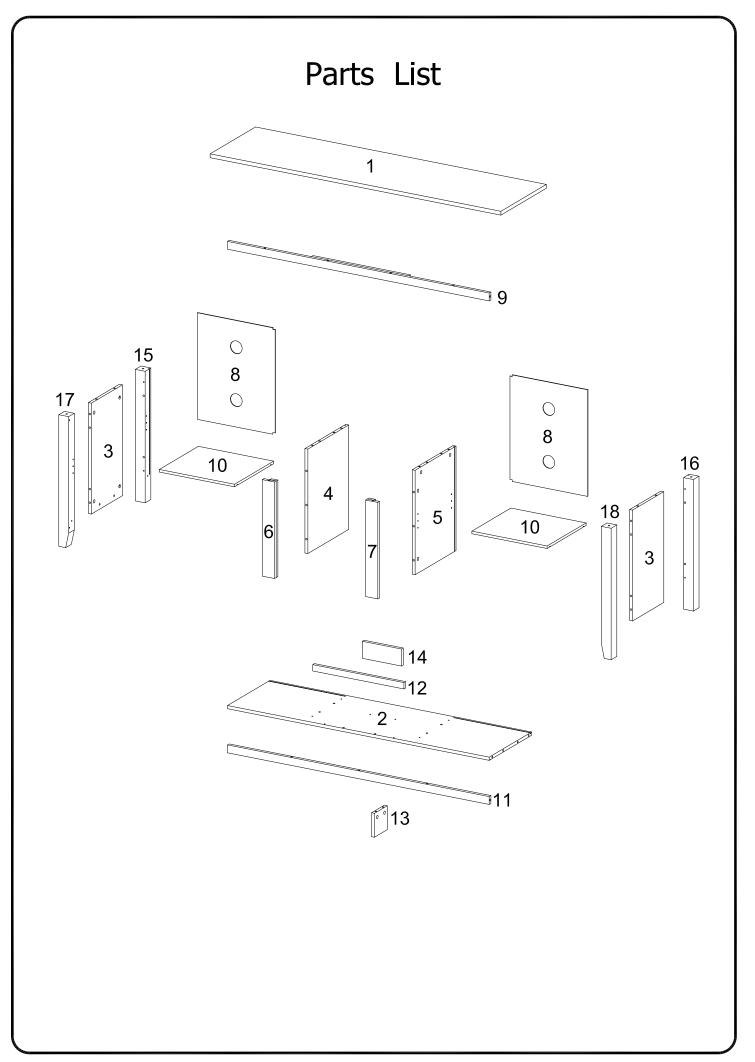


Hardware List

Α		Ø8x30	Wooden dowel	34	pcs
В		Ø6x35	Cam bolt	35	pcs
С		Ø15x11	Cam lock	35	pcs
D	<i>ammmn</i> — (9	Ø6x50	Bolt	4	pcs
E			Plastic wedge	8	pcs
F		Ø3x17	Flat-head screw	8	pcs
G		Ø5x16	Shelf support pin	8	pcs
Н	-aaaaaa (}	Ø4x31	Screw	2	pcs
J			Fireplace Insert (F18V66L)	1	рс
K		Ø3x12	Screw	6	pcs
L		M4	Wrench	1	рс
M			Glue tube	1	рс
N	0	Ø30	Sticker	35	pcs

 


Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

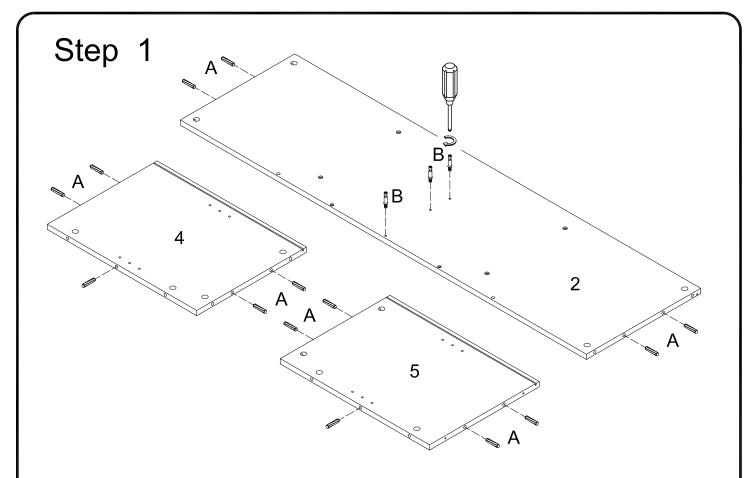


Insert the wooden dowel (A) into the bottom panel (2) and side panel (4)(5). Insert the cam bolt (B) into the bottom panel (2).


Step 2

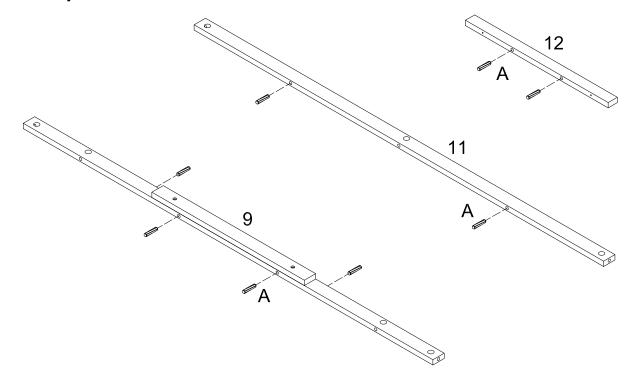


Insert the wooden dowel (A) into the front panel (9,11,12).

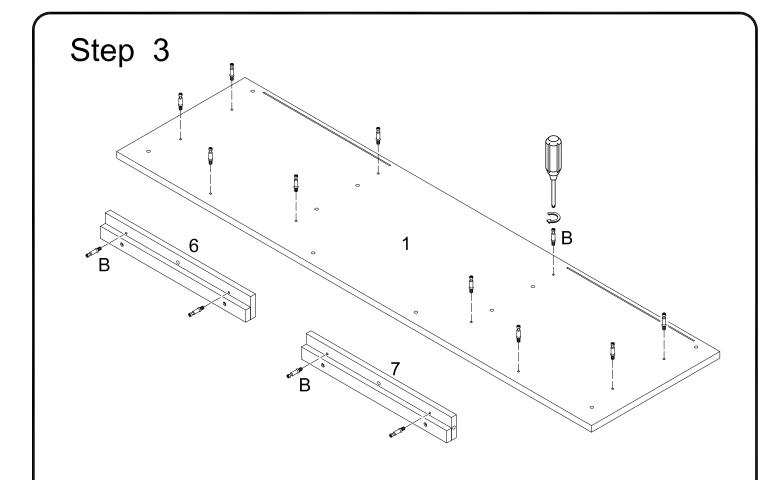


Insert the cam bolt (B) into the top panel (1) and support Front Panel (6,7).

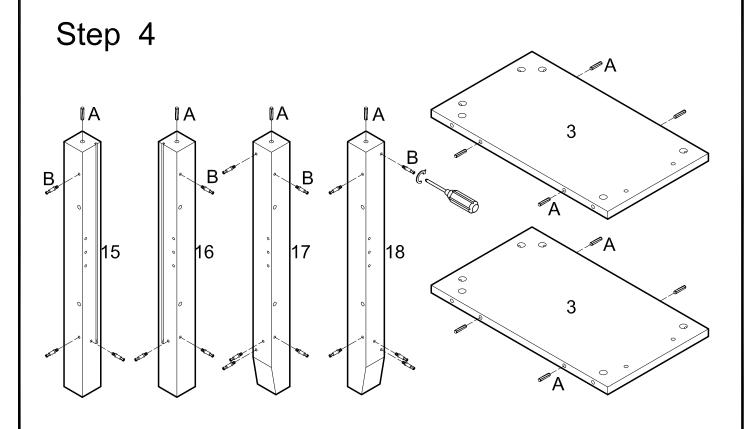


Insert the wooden dowel (A), cam bolt (B) into the wooden legs (15,16,17,18). Insert the wooden dowel (A) into the side panel (3).

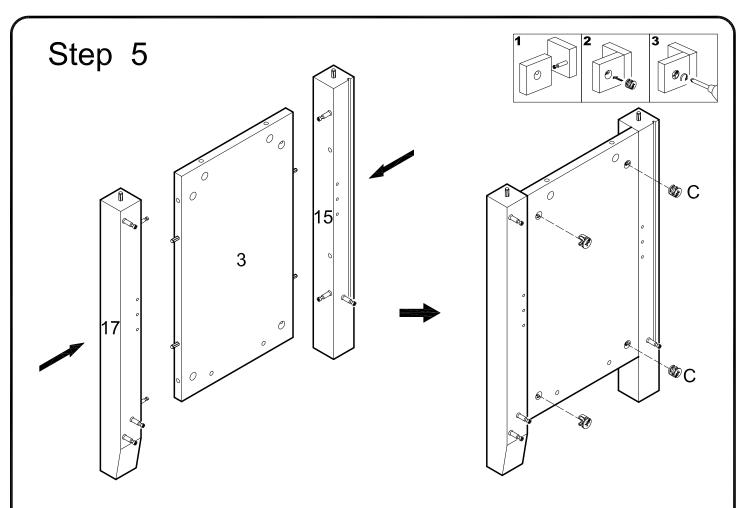


Use cam lock (C) to assemble the wooden legs (15,17) to the side panel (3).

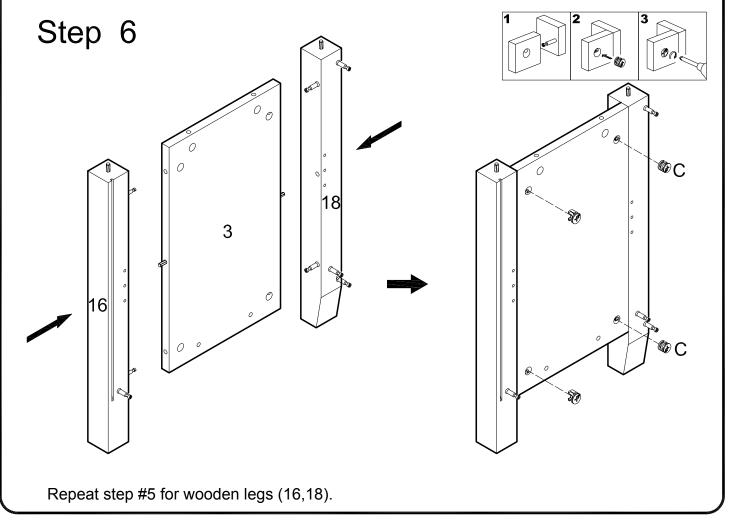


Step 7

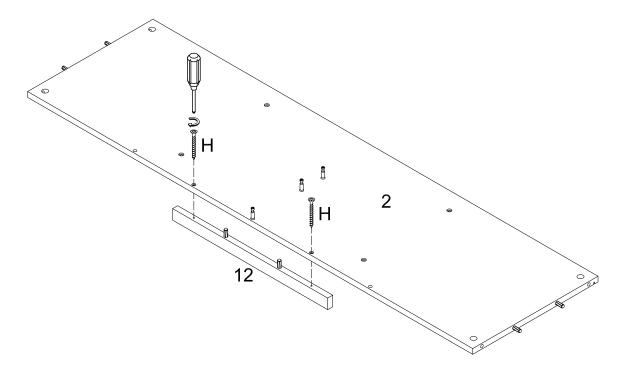



Upside down the bottom panel (2) and assemble the front panel (12) with screw (H).

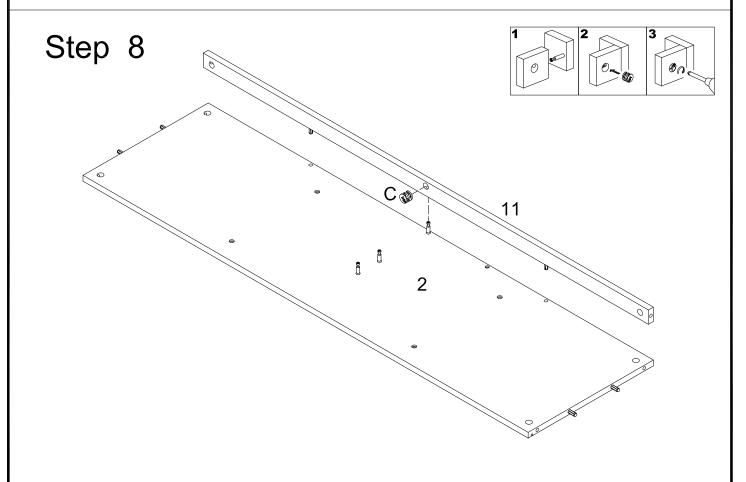


Use cam lock (C) to assemble the front panel (11) to the bottom panel (2).

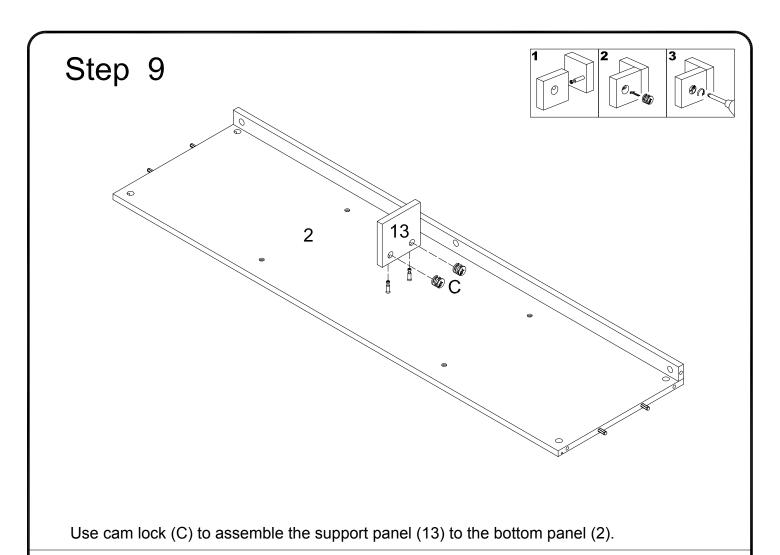


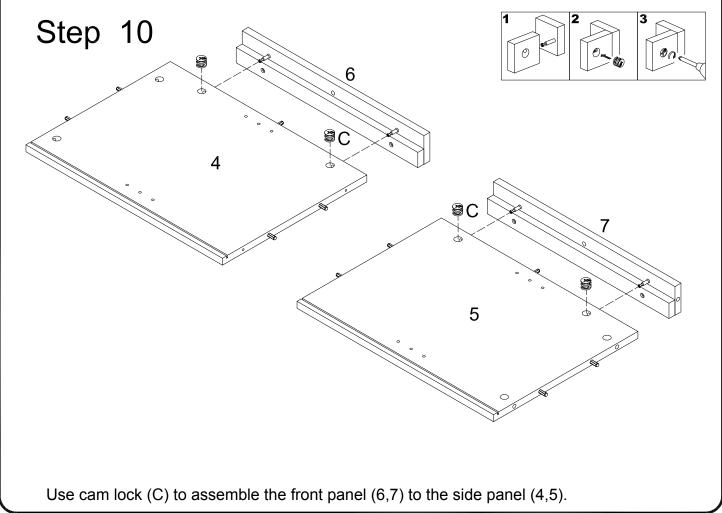

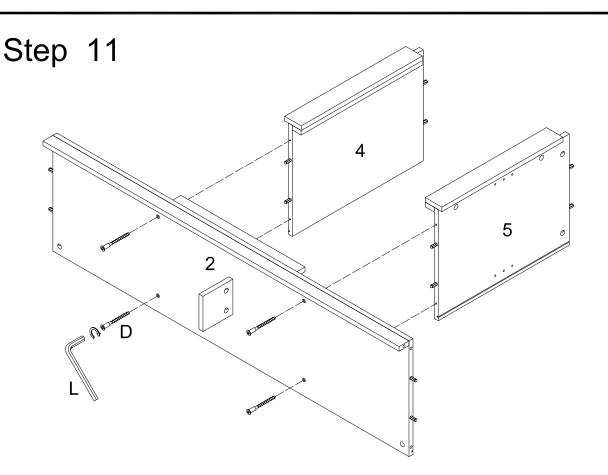



Assemble the side panel (4,5) to the bottom panel (2) and secure it by bolt (D) and wrench (L).

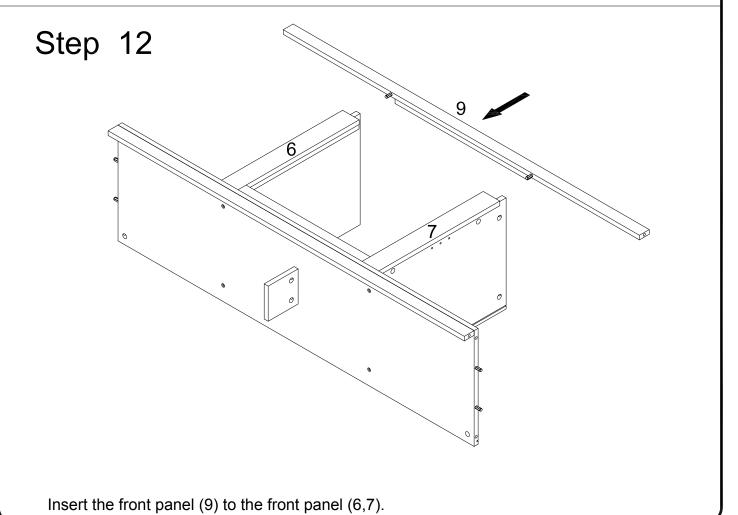

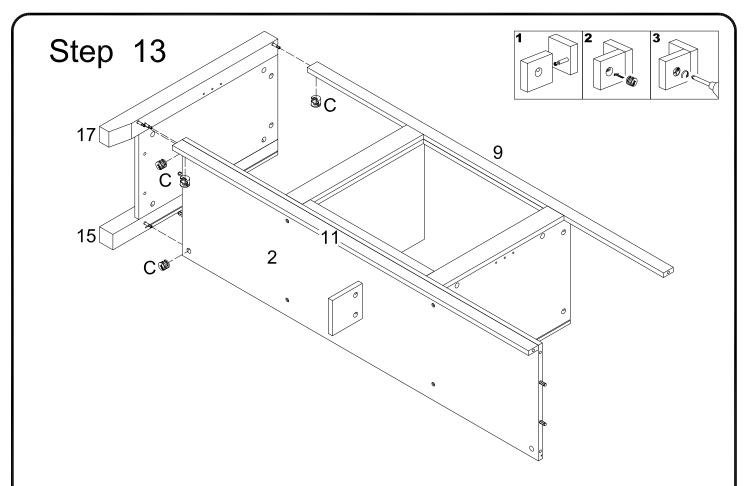


Assemble the wooden leg (15,17) to the front & bottom panel (2,9,11) and secure it with cam lock (C).

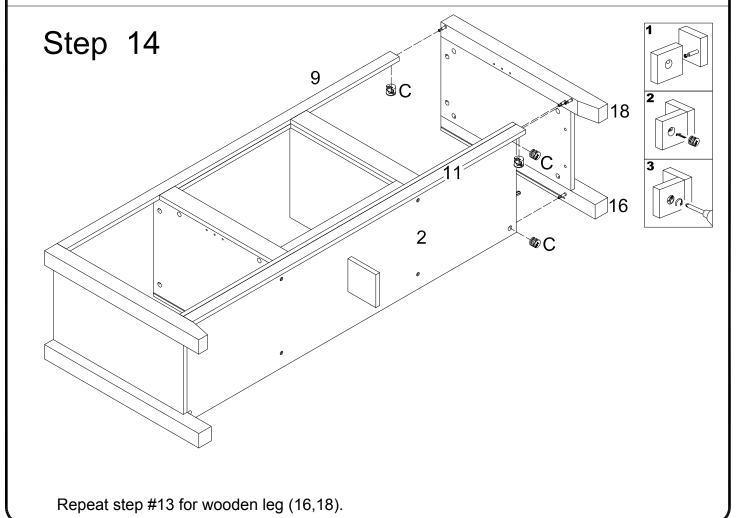


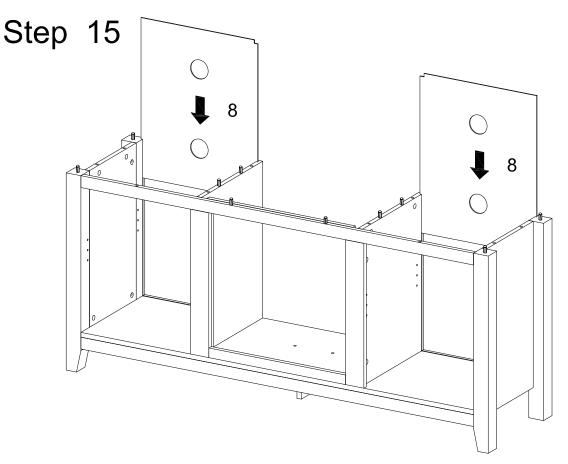


Right up the stand and slot in the back panel (8) to the side panels. Please pay attention on the corner direction of the back panel.

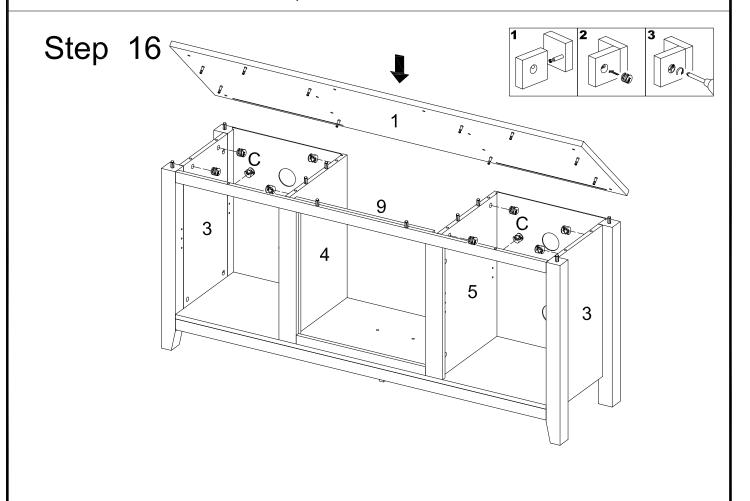


Place the top panel (1) to the stand and secure it with the cam locks (C).

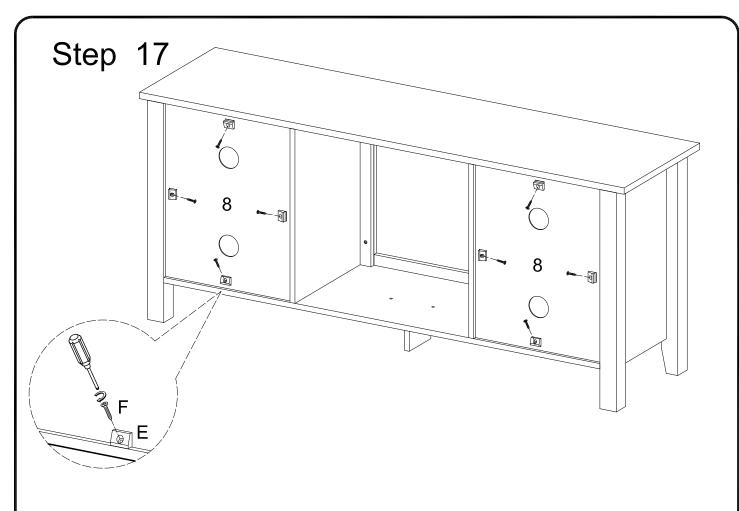

Use flat-head screw (F) and plastic wedge (E) to secure the back panel (8).

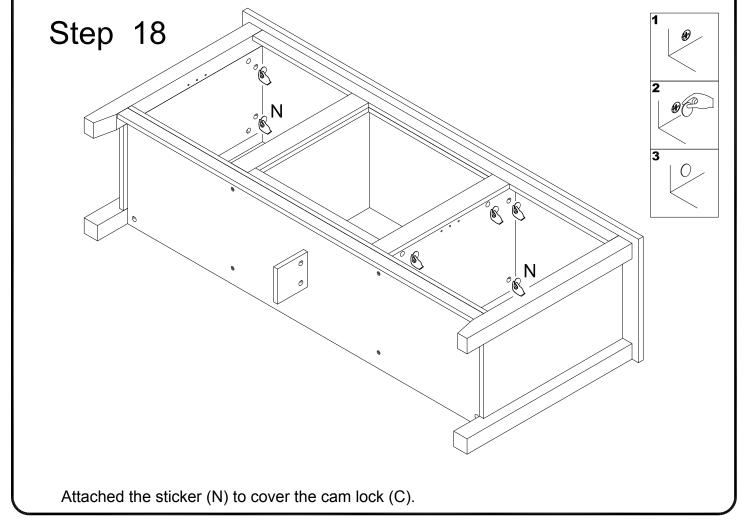




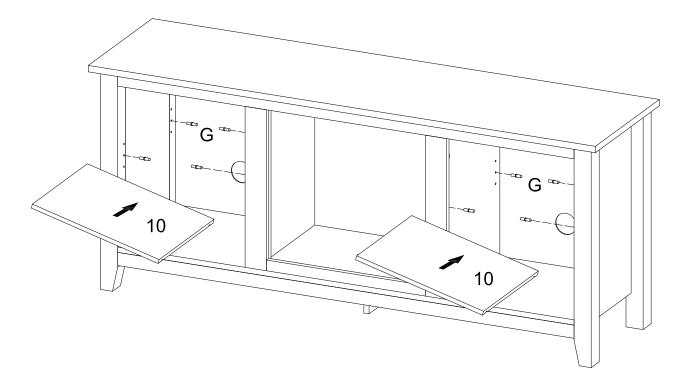


Input the shelf support pin (G) to the stand and place the wooden shelf (10) on top.

Step 20

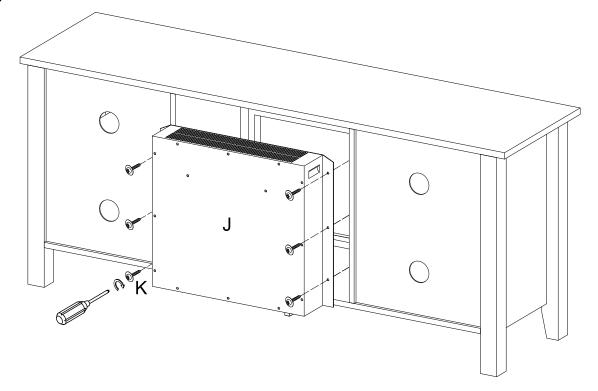

Assemble the fireplace insert (J) to the stand and secure it with screw (K).

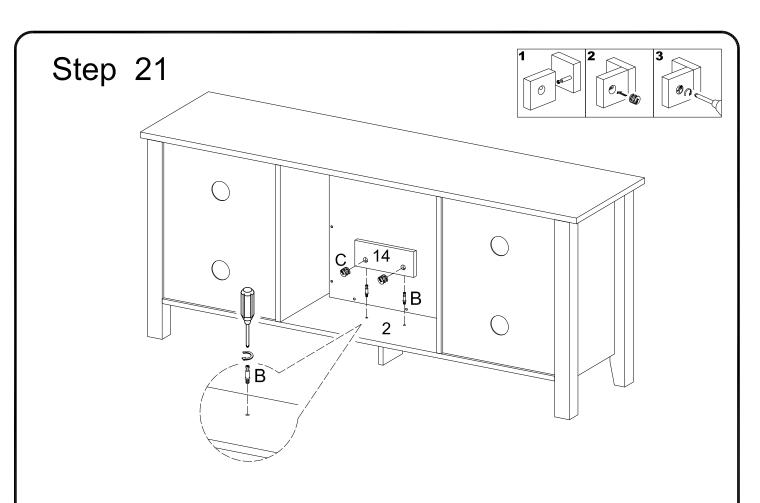

For security, insert the cam bolts (B) and use cam lock (C) to assemble the support panel (14) to the bottom panel (2).

