
sauder.com



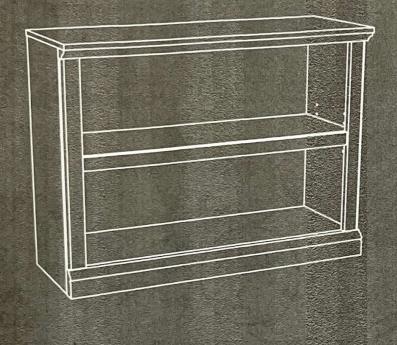

The stories of your life.

2-Shelf Bookcase

Model 414238

Need help? Visit Sauder.com to view video assembly tips or chat with a live rep. Prefer the phone? Call 1-800-523-3987.

Share your journey!









NOTE: THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

English pg 1-11 Français pg 12-13 Español pg 14-16

Lot # 371747 Purchased: ___


04/16/15

Be sure to give us a ring before making any returns. 1-800-523-3987

Table of Contents

Assembly Tools Required

Part Identification	3
Hardware Identification	4
Assembly Steps	5-11
Français	12-13
Español	14-16
Safety	17-18
Warranty	19

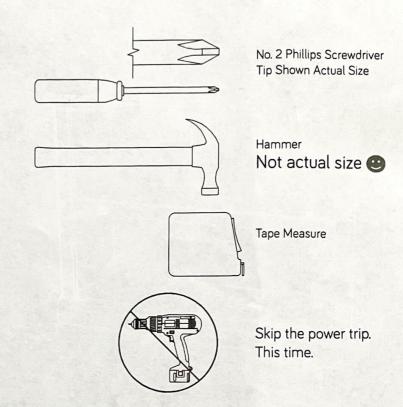


Part Identification



While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

Α	RIGHT END (1)	E	TOP (1)	a reconstitution	BACK (1)
В	LEFT END (1)	F	BOTTOM (1)	J	ADJUSTABLE SHELF (1)
M25	TOP MOLDING (1)	G	END MOLDING (2)	R	
M48	BASE (1)	Н	SHELF MOLDING (1)		

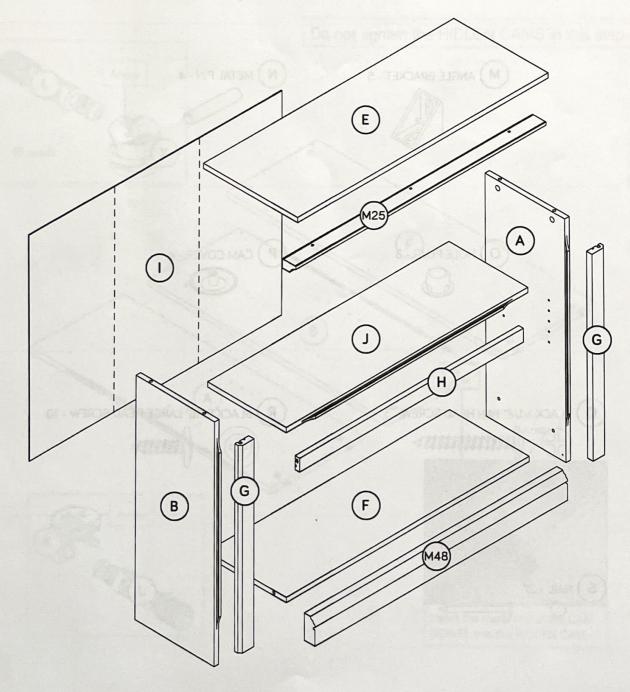

Hardware Identification

F Screws are shown actual size. You may receive extra hardware with your unit.



 











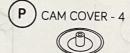

 - Q BLACK 1-1/8" PAN HEAD SCREW 3
- R BLACK 9/16" LARGE HEAD SCREW 10

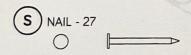

Look for this icon. It means a video assembly tip is available at www.sauder.com/services/tips




Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.

Push eight HIDDEN CAMS (K) into the ENDS (A and B) and BOTTOM (F). Then, insert the metal end of a CAM DOWEL (L) into each HIDDEN CAM.

Scan this QR code or go to this address: http://qr.sauder.com/?ID=1757 to watch a video on how to assemble your unit.



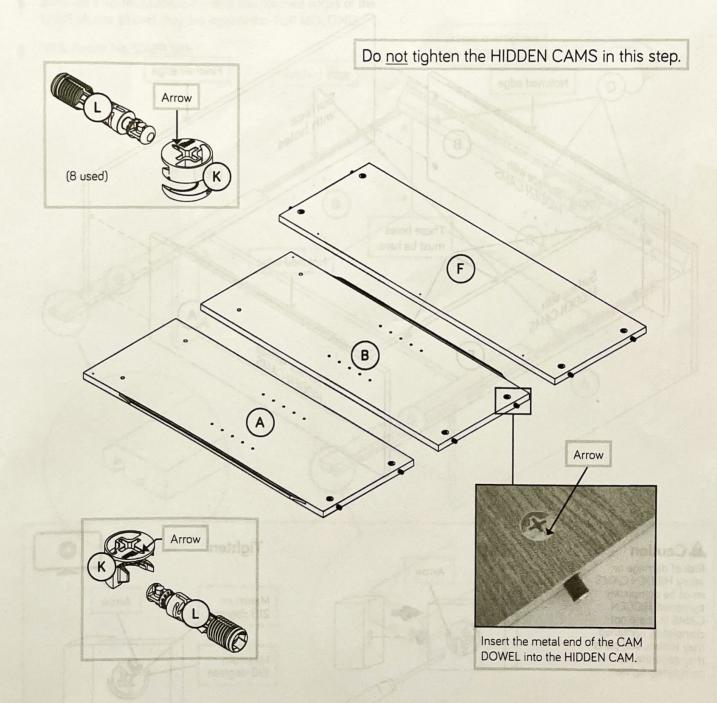





- Fasten the BOTTOM (F) to the ENDS (A and B). Tighten four HIDDEN CAMS as shown in the diagram below.
- Fasten the ENDS (A and B) to the TOP (E). Tighten four HIDDEN CAMS.


A Caution


Do <u>not</u> stand the unit upright without the BACK fastened. The unit may collapse.

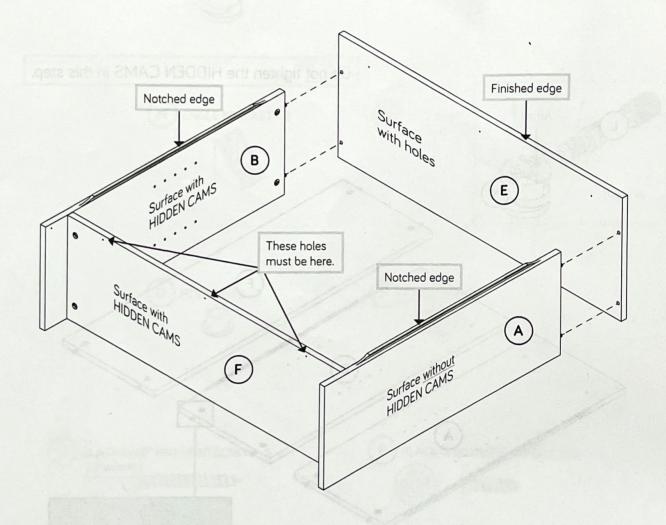

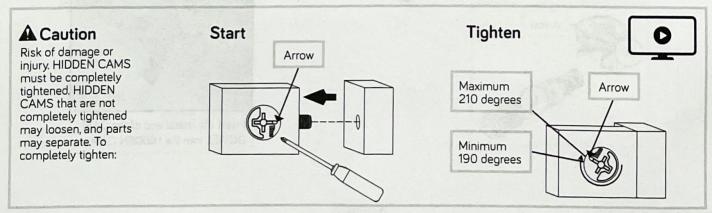


 - Fasten the TOP MOLDING (M25) to the TOP (E). Use three (B) base A) BLACK 1-1/8" PAN HEAD SCREWS (Q).
- NOTE: You should start each SCREW a few turns before completely tightening them. Do <u>not</u> overtighten.

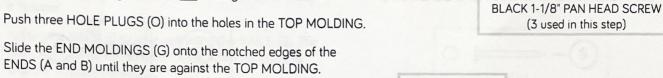

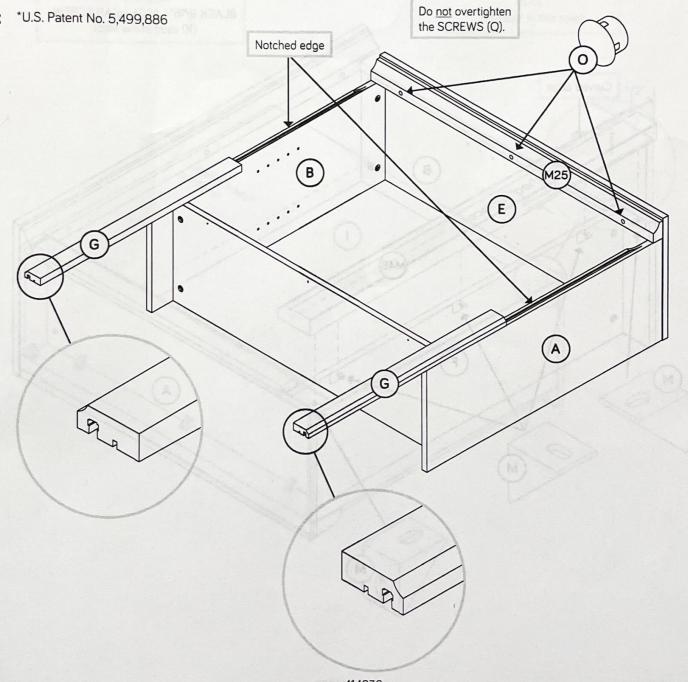

- Fasten five ANGLE BRACKETS (M) to the ENDS (A and B) and BOTTOM (F). Use five BLACK 9/16" LARGE HEAD SCREWS (R).
- Fasten the BASE (M48) to the ENDS (A and B) and BOTTOM (F). Use five BLACK 9/16" LARGE HEAD SCREWS (R).

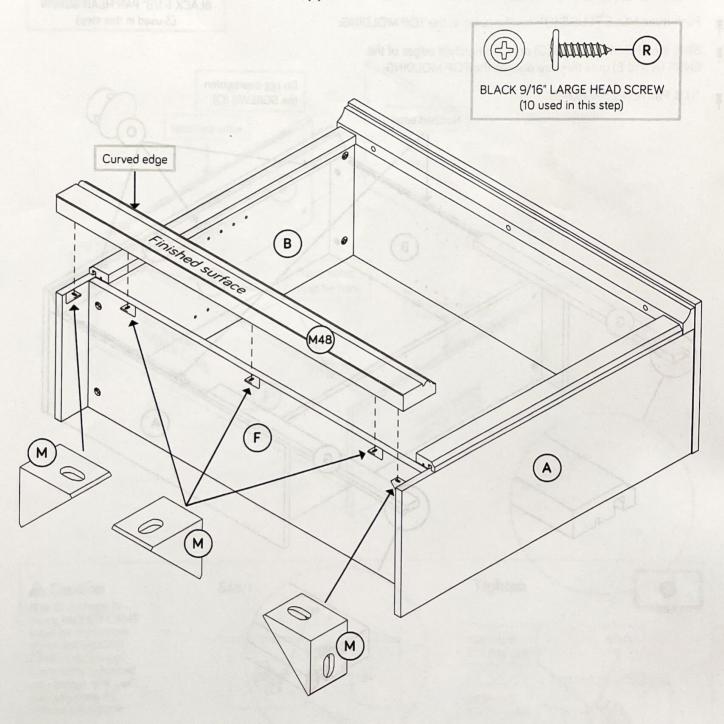





- Carefully turn your unit over onto its front edges. Unfold the BACK (I) and lay it over your unit.
- Make equal margins along all four edges of the BACK (I). Push on opposite corners of your unit if needed to make it "square".
- Fasten the BACK (I) to your unit using the NAILS (S). The NAILS should be 5-1/2" apart, 1-1/2" from the corners, and 1/4" in from the edges.




 Do <u>not</u> stand the unit upright without the BACK fastened. The unit may collapse.

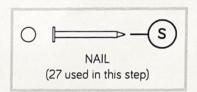


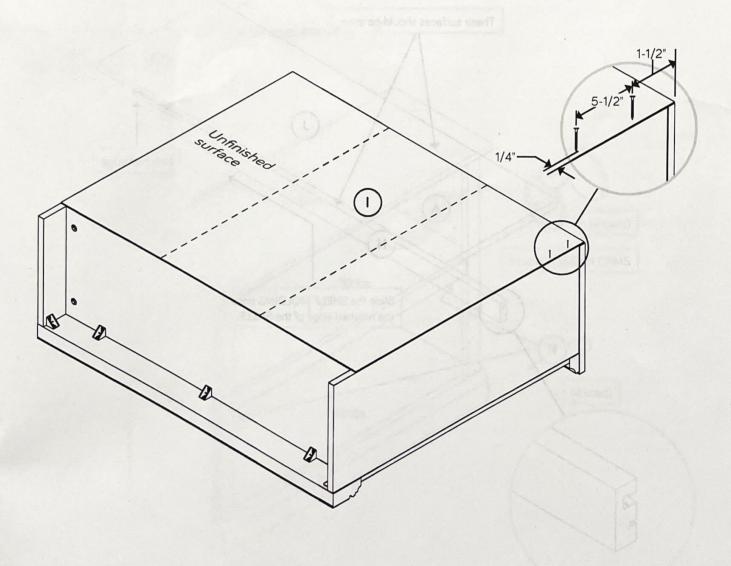

- Slide and center the SHELF MOLDING (H) onto the notched edge of the SHELF (J).
- ▼ *U.S. Patent No. 5,499,886

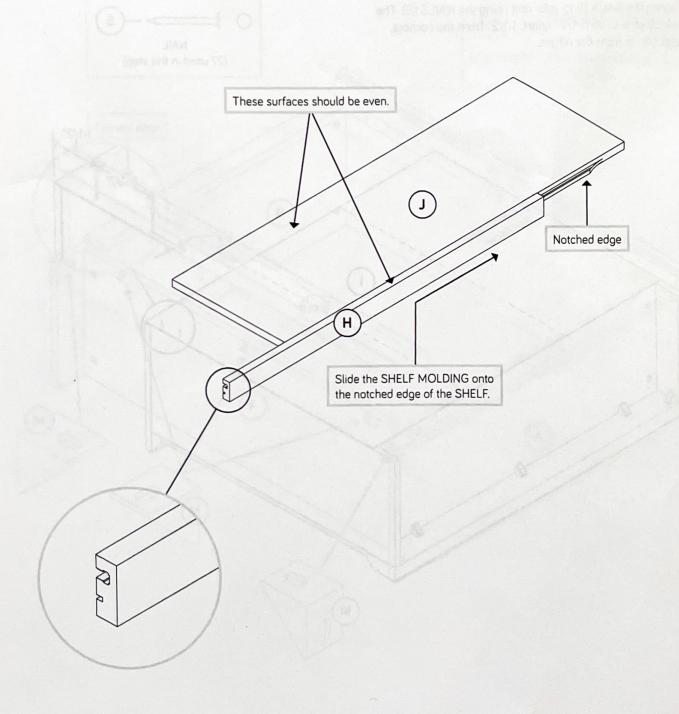

- Slide and center the SHELF MOLDING (H) onto the notched edge of the SHELF (J).
- *U.S. Patent No. 5,499,886

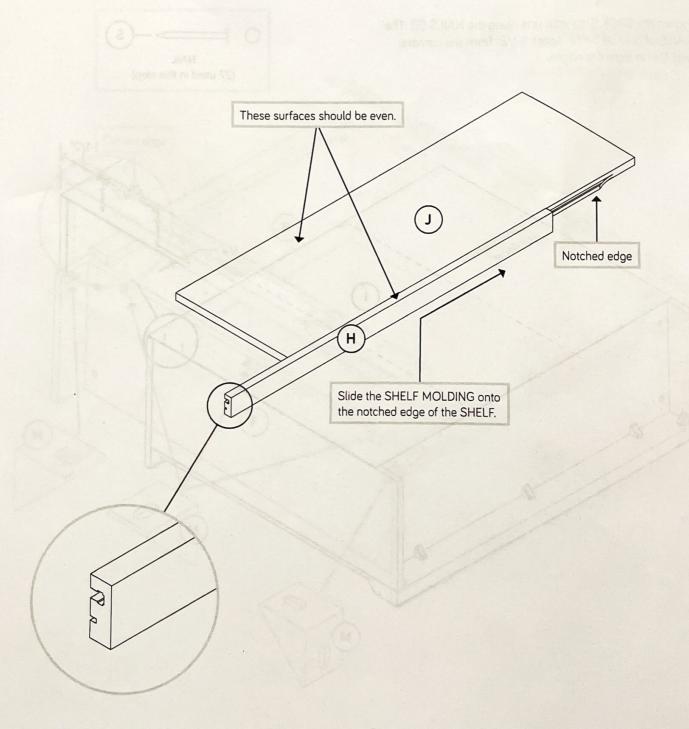


- Carefully stand your unit upright.
- Push a CAM COVER (P) onto each HIDDEN CAM.
- Insert the METAL PINS (N) into the hole locations of your choice in the ENDS (A and B). Set the ADJUSTABLE SHELF (J) onto the METAL PINS.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with your favorite furniture polish or a damp cloth. Wipe dry.
- And to celebrate, why not share your success story?









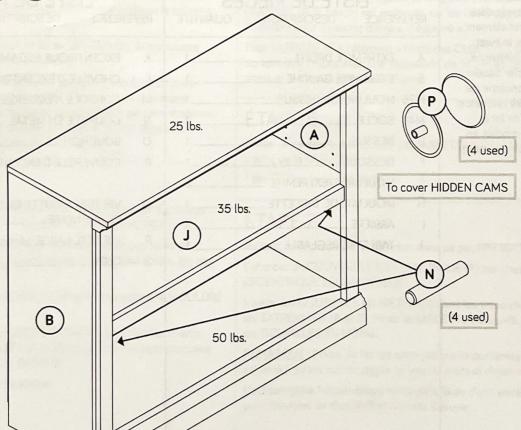

Pro Tip: Lift with your legs. And, you know,

your arms.