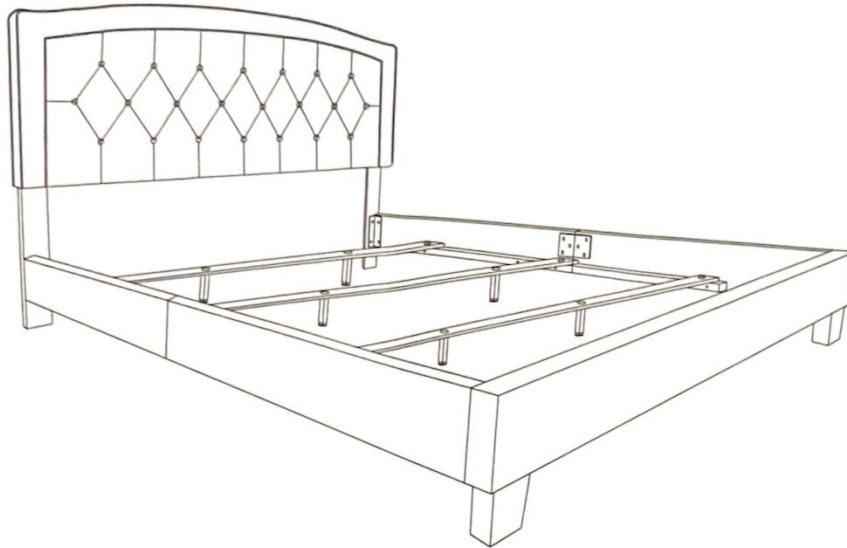




ITEM#: C11

ALTON FURNITURE GROUP

A RENOWNED NAME
— FURNISH A BETTER LIFE —



CAUTION

Please do not return this item to the store where it was purchased

We appreciate your selection of our product. You can have confidence in this product that incorporates quality components. Please do not return this item to where it was purchased, if any question, please contact our Customer Service Department at 1-866-558 -0211 between 8:30am- 5:00pm(Pacific Time) Monday through Friday, or E-mail us at info@altonfurniture.com

Quality statement

AFG is appreciates your selection of this product, we know you had many other choices. Please pay attention that proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

Upholstered furniture care instructions

- Vacuum your upholstered furniture regularly. Small dust particles are very abrasive and can wear furniture prematurely.
- Blot spills immediately to prevent staining. If necessary, gently wipe away the spill using a soft, clean cloth dampened with lukewarm water. Allow to dry and brush lightly.
- Never use harsh chemicals or solvents on your upholstered furniture as this may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- If you choose to use a professional product, pretest the fabric in an inconspicuous area for any signs of discoloration or shrinking.
- Marks and stains from pens, crayons and ink markers are difficult to remove. In the event that your furniture becomes permanently stained, we recommend that you consult a professional expert.

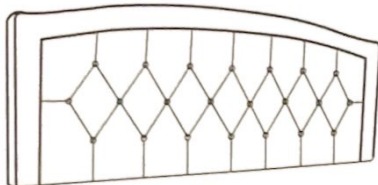
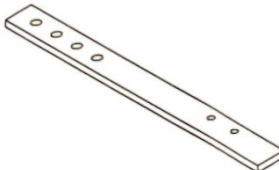
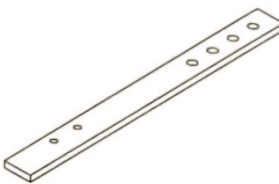
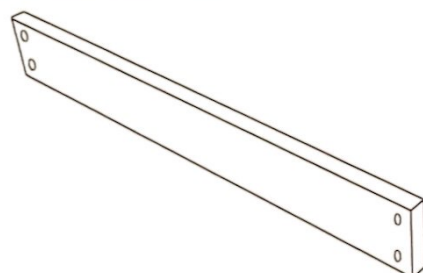
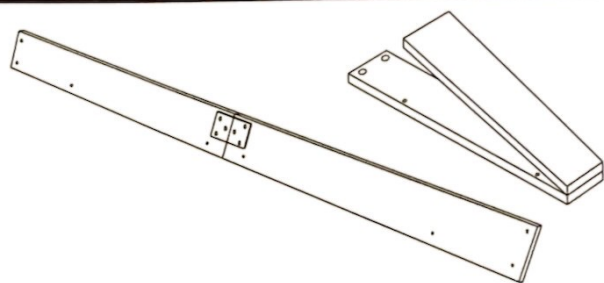
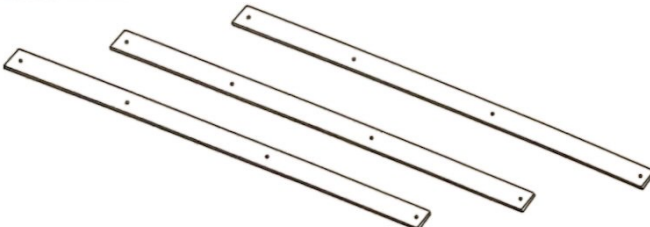
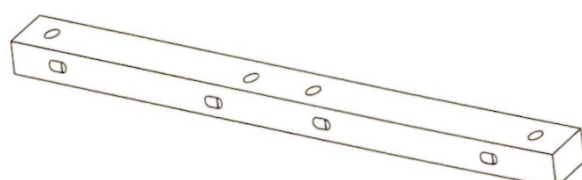
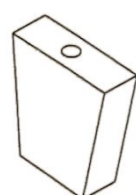

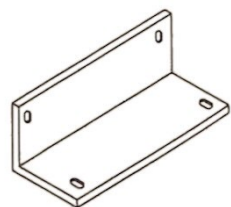


ALTON FURNITURE GROUP

A RENOWNED NAME
FURNISH A BETTER LIFE

PARTS LIST

PLEASE ALWAYS CHECK EVERY PART BEFORE YOUR ASSEMBLY

A	1PCE	L	1PCE	R	1PCE
Headboard Panel		Left Leg		Right Leg	
					
D	1PCE	E	2PCS		
Footboard		Side Rails			
					
G	3PCS	H	2PCS		
Wooden Slats		Iron Tubes			
					
⑪	2PCS	⑫	6PCS	⑬	4PCS
Wooden Feet		Support Legs		L-metal Plates	
					





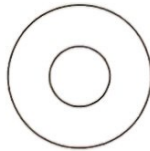

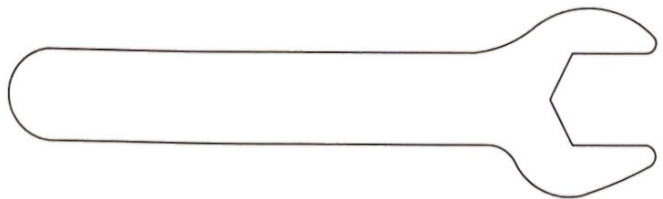


ALTON FURNITURE GROUP

A RENOWNED NAME
FURNISH A BETTER LIFE

HARDWARE LIST

PLEASE ALWAYS CHECK EVERY PART BEFORE YOUR ASSEMBLY

①	12PCS	②	16PCS	③	12PCS
1/4"x1-3/4" Allen Bolts		5/16"x1" Allen Bolts		5/16"x2-1/8" Allen Bolts	
					
④	2PCS	⑤	36PCS		
1/4"x3" Allen Bolts		Flat Washers			
					
⑥	22PCS	⑦	1PCE		
Spring Washers		Wrench			
					



ALTON FURNITURE GROUP

A RENOWNED NAME
FURNISH A BETTER LIFE

HARDWARE LIST

PLEASE ALWAYS CHECK EVERY PART BEFORE YOUR ASSEMBLY

⑧

6PCS

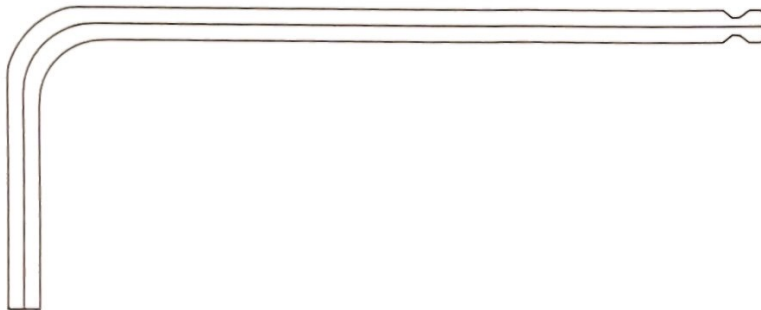
Nuts 5/16



⑨

1PCE

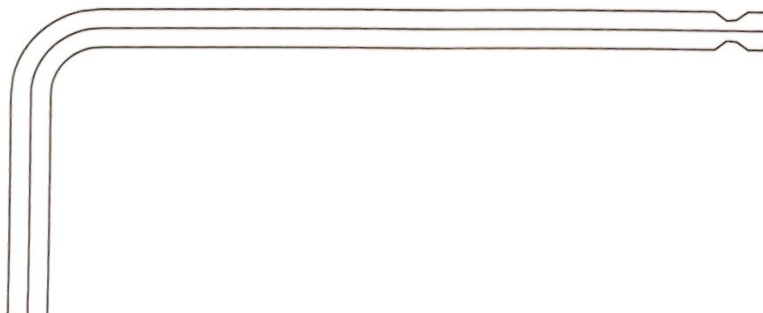
Allen Wrench 1/4



⑩

1PCE

Allen Wrench 5/16





ALTON FURNITURE GROUP

A RENOWNED NAME
FURNISH A BETTER LIFE

IMPORTANT!!

To assemble the full unit straight, please do not tighten the individual screw completely, only tighten the screws halfway through before positioning other screws. After all the screws are in position, secure the screws tight and completely.

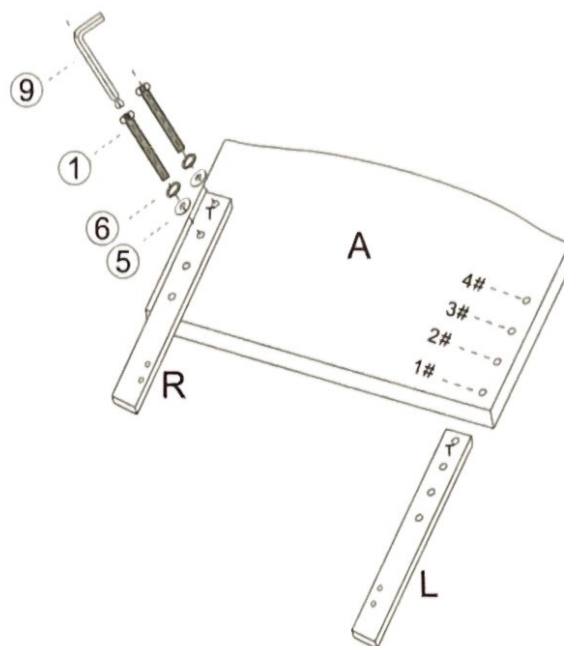
**Please also check your thickness of mattress and box spring before your assembly.

Step 1:





Assemble the Legs(L&R) and Headboard(A).

IMPORTANT!

Please check your box spring and / or mattress thickness before your assembly.



Box Spring + Mattress	Adjustable Headboard Height
Under 10"	T match 4#
10"~14"	T match 3#
14"~18"	T match 2#
18"	T match 1#

⑤	4PCS	⑥	4PCS
Flat Washers		Spring Washers	
			
①	4PCS	⑨	1PCE
1/4"x1-3/4" Allen Bolts		Allen Wrench 1/4	
			



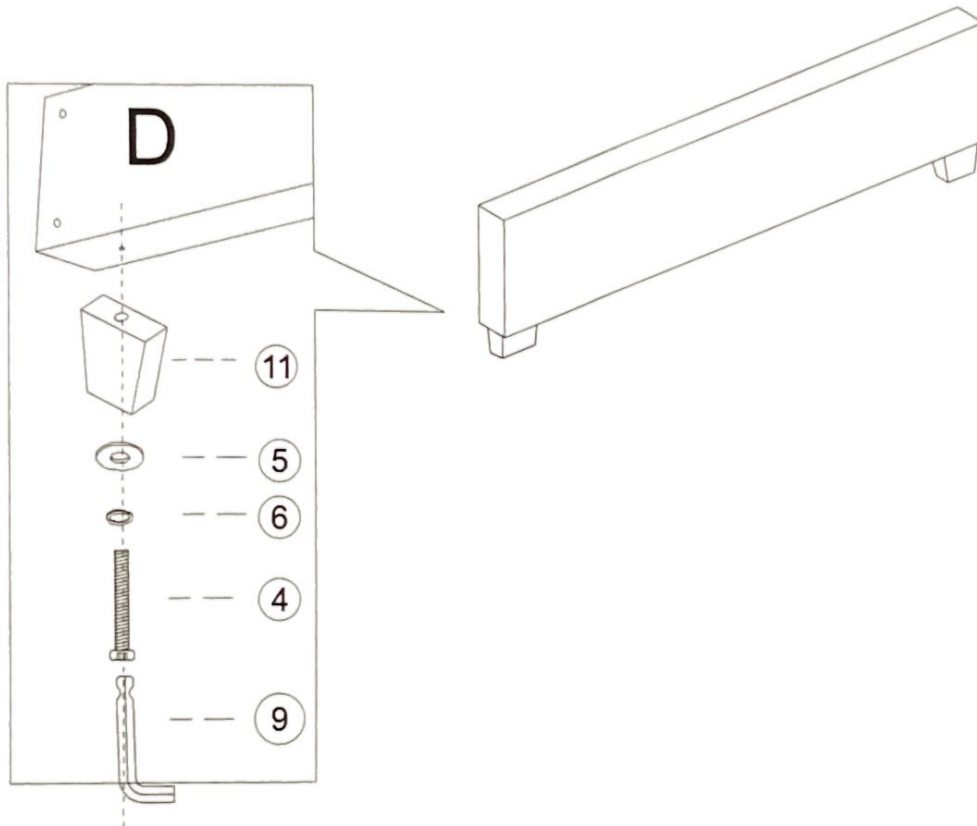
ALTON FURNITURE GROUP




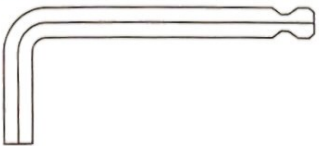
A RENOWNED NAME

FURNISH A BETTER LIFE

Step 2:

Assemble Wooden feet (11) to Footboard(D).



⑤	2PCS	⑥	2PCS
Flat Washers		Spring Washers	
			
④	2PCS	⑨	1PCE
1/4"x3" Allen Bolts		Allen Wrench 1/4	
			



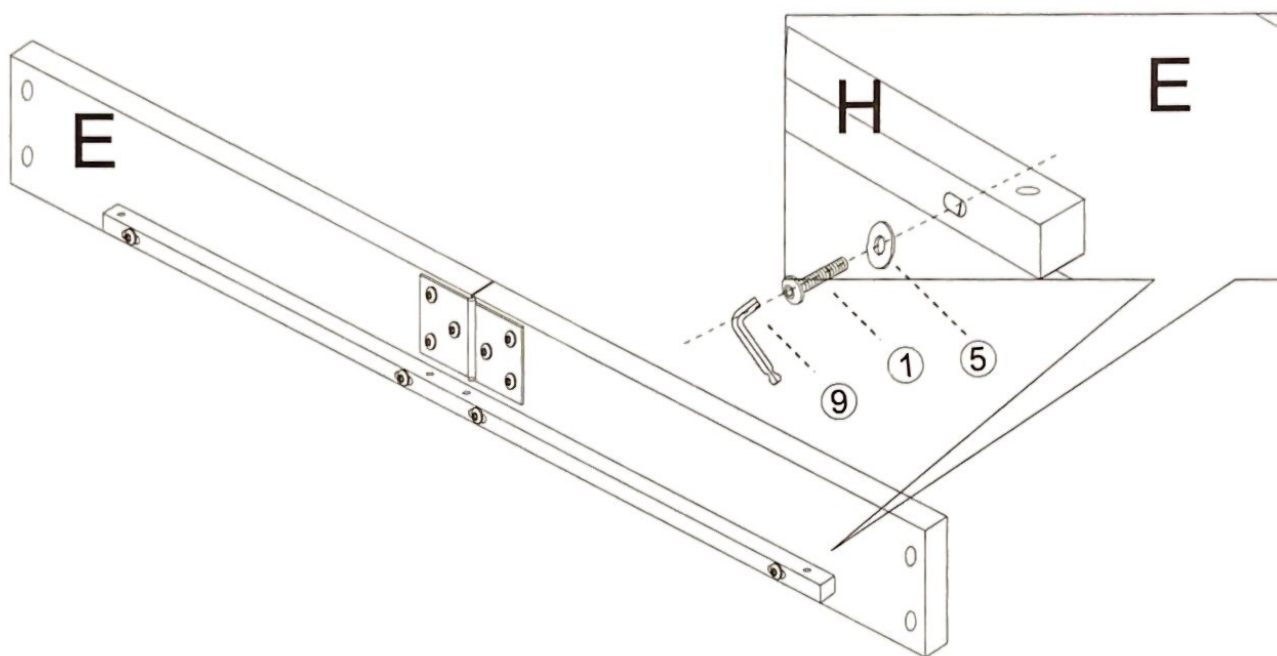
ALTON FURNITURE GROUP


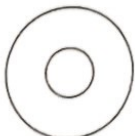

A RENOWNED NAME
FURNISH A BETTER LIFE

To assemble the full unit straight, please do not tighten the individual screw completely, only tighten the screws halfway through before positioning other screws, After all the screws are in position, secure the screws tight and completely.

Step 3:

Unfold the Side Rails(E), assemble the Iron Tubes(H) to Side Rails(E).



①	8PCS	⑤	8PCS	⑨	1PCE
1/4"x1-3/4" Allen Bolts		Flat Washers		Allen Wrench 1/4	
					



ALTON FURNITURE GROUP

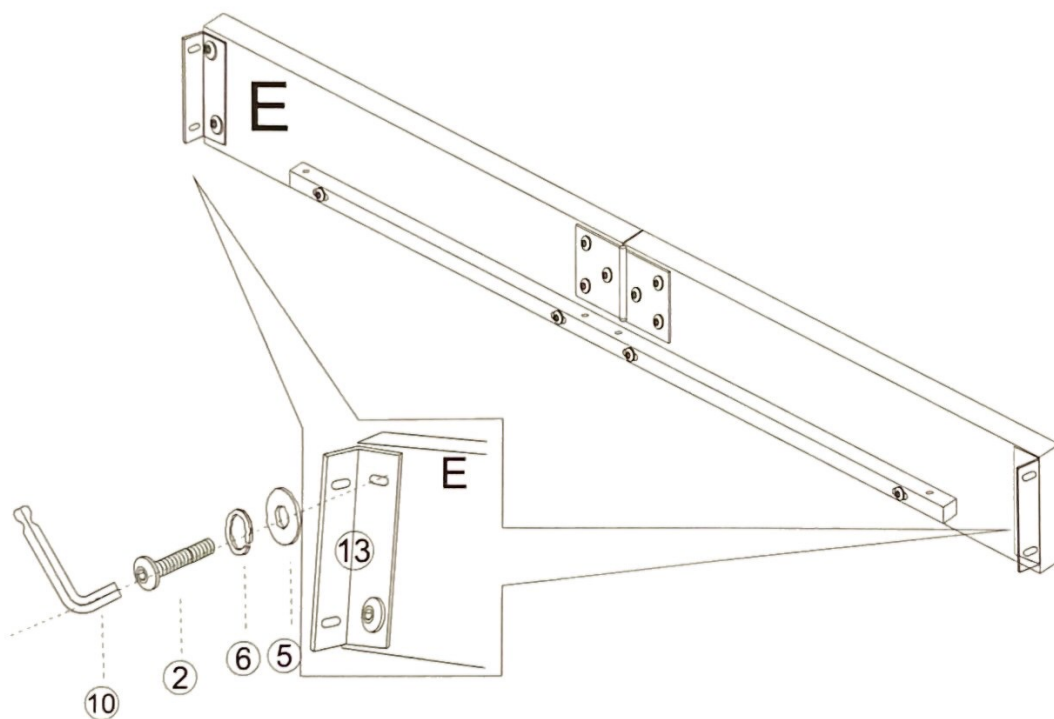
A RENOWNED NAME

FURNISH A BETTER LIFE

To assemble the full unit straight, please do not tighten the individual screw completely, only tighten the screws halfway through before positioning other screws, After all the screws are in position, secure the screws tight and completely.

Step 4:

Assemble the L-Metal Plates (13) to Side Rails (E).



②

8PCS

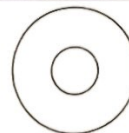
5/16"x1" Allen Bolts



⑤

8PCS

Flat Washers



⑥

8PCS

Spring Washers



⑩

1PCE

Allen Wrench 5/16





ALTON FURNITURE GROUP

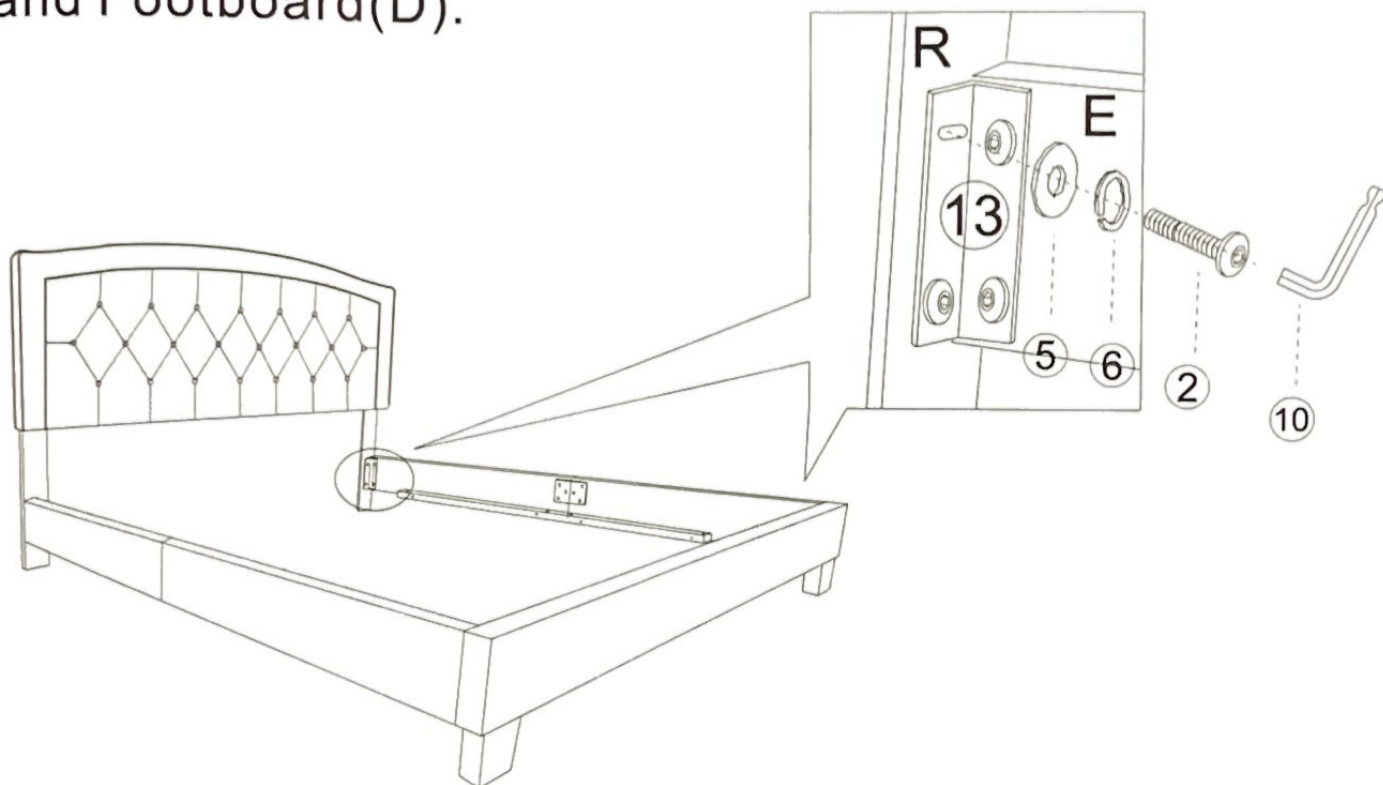
A RENOWNED NAME





FURNISH A BETTER LIFE

To assemble the full unit straight, please do not tighten the individual screw completely, only tighten the screws halfway through before positioning other screws, After all the screws are in position, secure the screws tight and completely.

Step 5:

Attach Side Rails(E) to the Left Leg & Right Leg (L/R) and Footboard(D).



⑤	8PCS	⑥	8PCS
Flat Washers		Spring Washers	
			
②	8PCS	⑩	1PCE
5/16"x1" Allen Bolts		Allen Wrench 5/16	
			



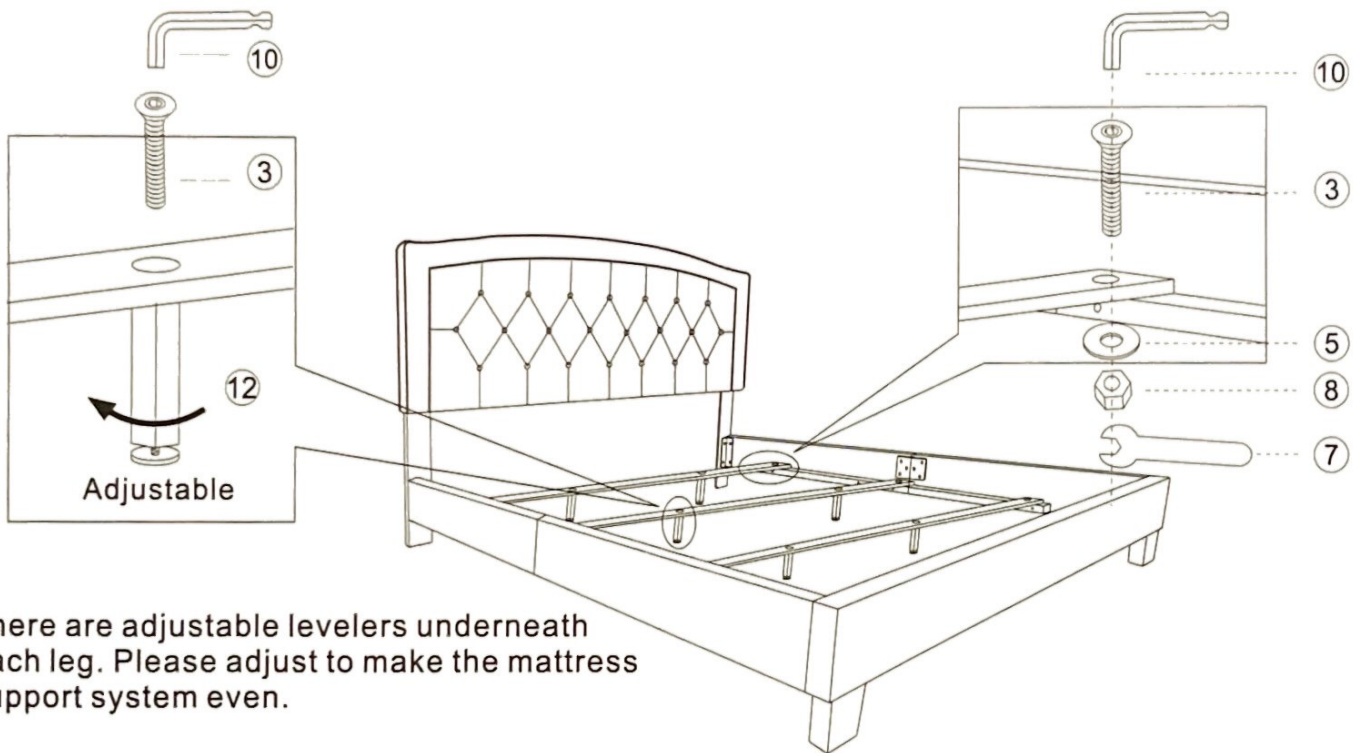
ALTON FURNITURE GROUP

A RENOWNED NAME
FURNISH A BETTER LIFE






To assemble the full unit straight, please do not tighten the individual screw completely, only tighten the screws halfway through before positioning other screws, After all the screws are in position, secure the screws tight and completely.

Step 6:

Assemble Wooden Slats(G) and Support Legs (12).



There are adjustable levelers underneath each leg. Please adjust to make the mattress support system even.

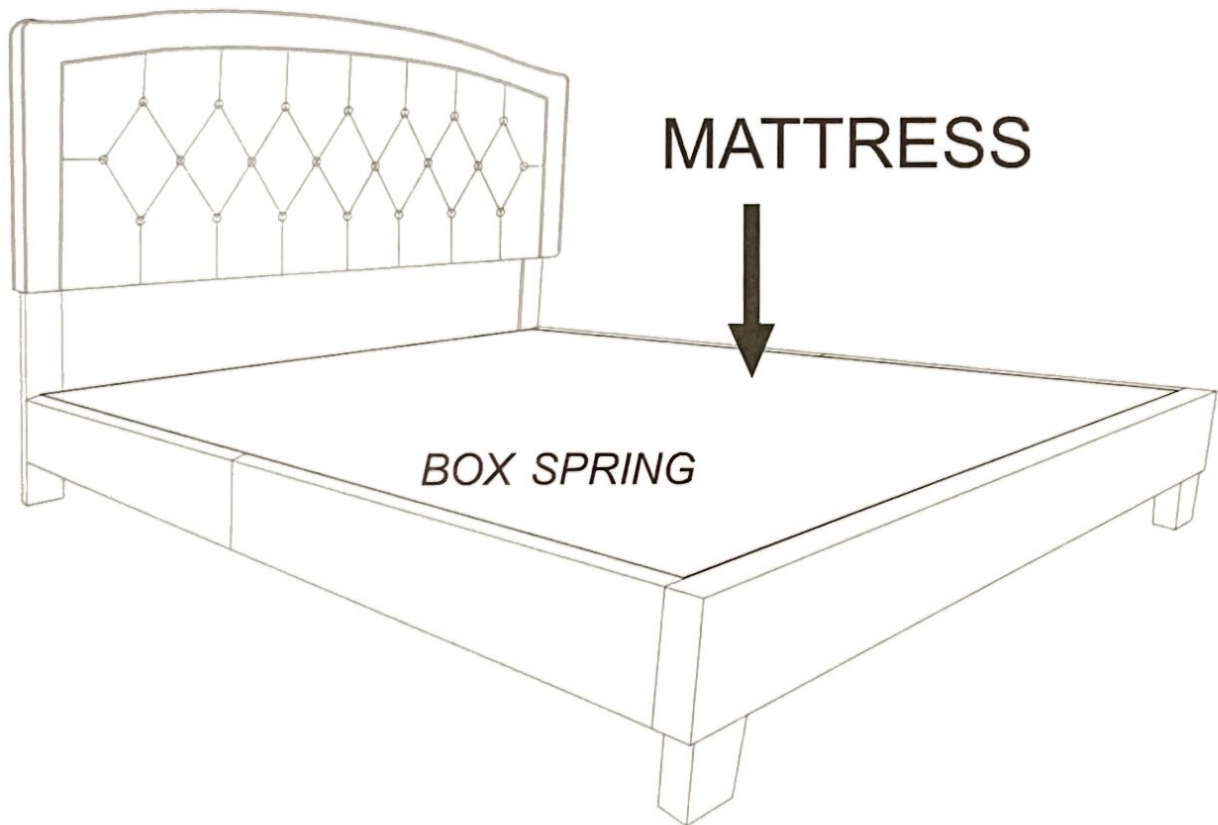
⑤	6PCS	⑧	6PCS	⑩	1PCE
Flat Washers		Nuts		Allen Wrench 5/16	
					
③	12PCS		⑦	1PCE	
5/16"x2-1/8" Allen Bolts			Wrench		
					



ALTON FURNITURE GROUP

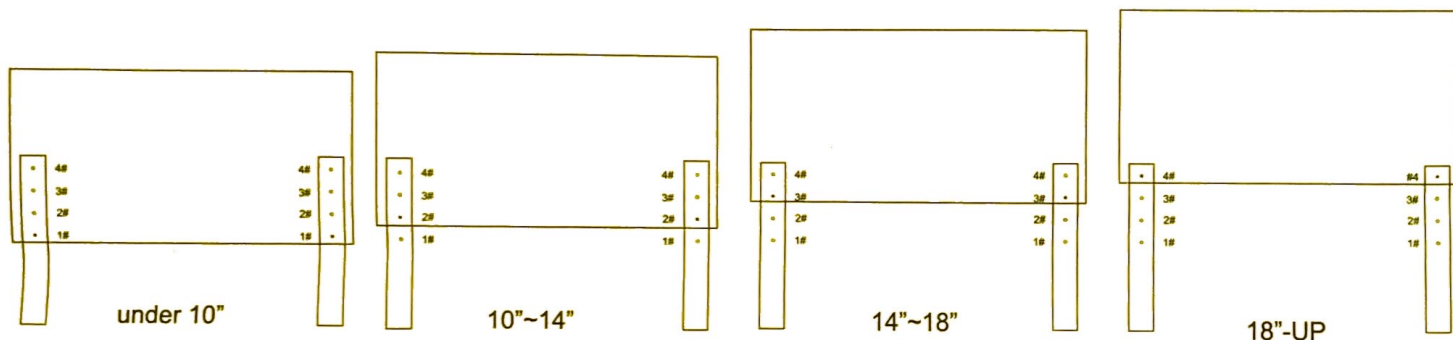
A RENOWNED NAME

FURNISH A BETTER LIFE



IMPORTANT!

Please check your box spring and / or mattress thickness before your assembly.



Box Spring +Mattress Thickness	Adjustable HeadBoard Height Fasten 1pc of Allen bolts match T at 4# Fasten the other Allen bolts match either hole
under 10"	T match 4#
10~14"	T match 3#
14"~18"	T match 2#
18"~UP	T match 1#